
## SURE-GRIP XL<sup>TM</sup> Tool Mounts Models SG-VM-XL & SG-VM-XLS Parts and Instruction manual

# ZICO<sup>®</sup> 3085PM3


REV. 4-19-21

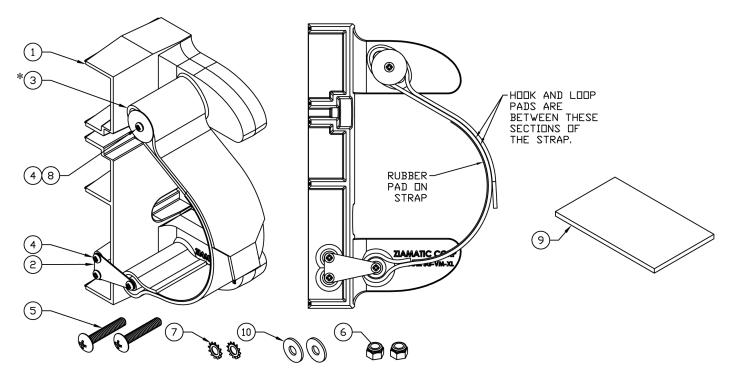



\* Figures shown with 19-1/2" strap (SG-VM-XL). 15-1/2" Strap (SG-VM-XLS) is similar.

|           |   | WT./@   |
|-----------|---|---------|
| MODEL     | DESCRIPTION                               | IN LBS. |
| SG-VM-XL  | SURE-GRIP XL Bracket - 3" - 4" grip range | .90     |
| SG-VM-XLS | SURE-GRIP XL Bracket - 2" - 3" grip range | .90     |

| ITEM | PART NUMBER  | DESCRIPTION  | QTY. |
|------|--------------|--|------|
| 1    | 3085-505-105 | SURE GRIP BASE   | 1    |
| 2    | 3085-505-107 | STRAP PLATE  | 1    |
| 3A   | 3085-505-109 | STRAP, STANDARD 19.5" (SG-VM-XL)                             | 1    |
| 3B   | 3085-510-109 | STRAP, SHORT 15.5" (SG-VM-XLS)                               | 1    |
| 4    | 9125-191306  | SCREW, #6-20 x 3/8", PLASTIC THREAD<br>CUTTING, SS, 94629A70 | 4    |
| 5    | 9010-262528  | SCREW, 1/4-20 x 2" TRUSS HEAD ZPS                            | 2    |
| 6    | 9013-172500  | NUT, 1/4-20 HEX HEAD, LOW-PRO NYLON<br>LOCK, ZPS             | 2    |
| 7    | 9014-262500  | LOCK WASHER, 1/4" EXTERNAL TOOTH,<br>ZPS                     | 2    |
| 8    | 9014-161600  | FENDER WASHER, #8 X 1.000 O.D. ZPS                           | 1    |
| 9    | 3085-505-901 | PAD WITH ADHESIVE, 3" x 4"                                   | 1    |
| 10   | 9014-112500  | FLAT WASHER, 1/4" ZPS  | 2    |

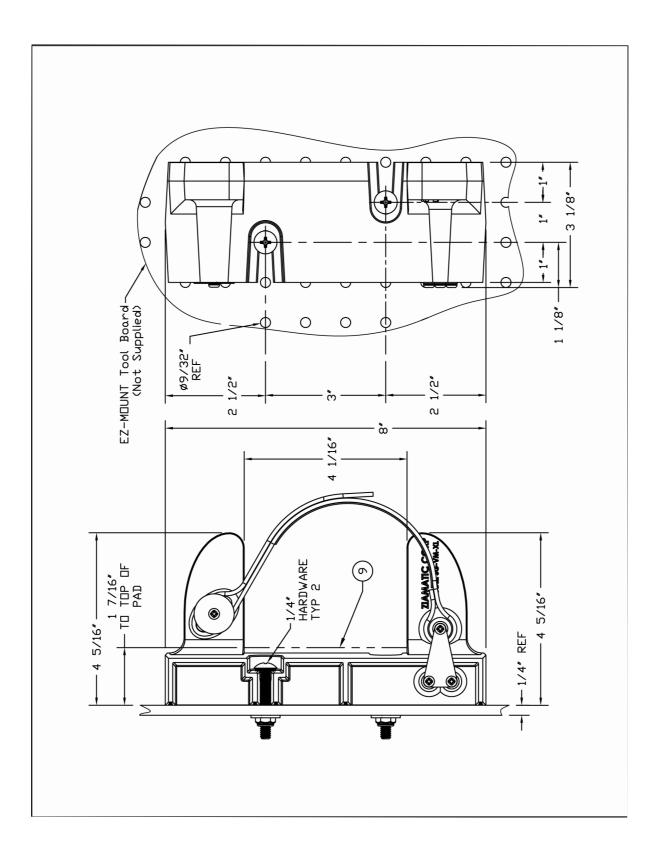

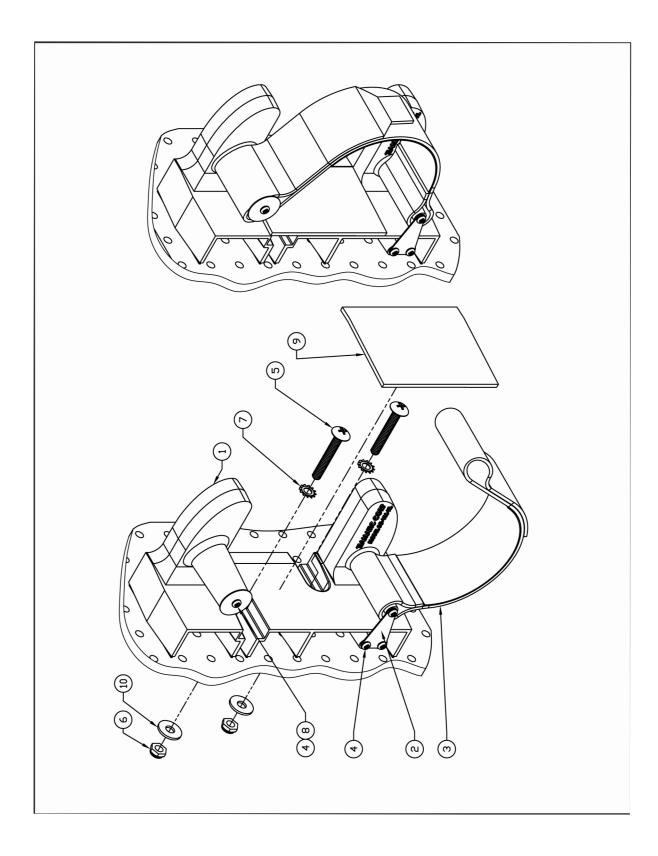

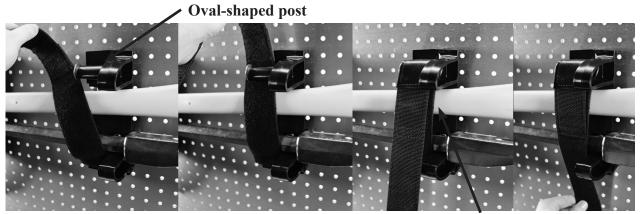

Note: Part numbers in parentheses (see Page 1).

Hook & loop pads

#### I. INSTALLATION

- 1. When using two SURE-GRIP mounts to secure one tool, it is suggested to space the mounts approximately shoulder-width apart to allow for quicker and easier operation
- 2. Attach Base to mounting surface using Truss Head Screws (5) combined with 1/4" nuts (6) and washers (7)(10). Use longer screws if needed.
- 3. Adhere the Pad (9) to the flat portion of Base (see Page 3).

### II. <u>SECURING THE TOOL</u>

- 1. Place and hold the tool against the Base. When in a horizontal configuration, support arm may be used for assistance and stability.
- 2. Place the Strap (3) over the tool. Wrap it around the oval-shaped post from the side (see above).
- 3. While maintaining tension on the strap, pull away from the Base to tighten, then connect the hook pad and the loop pad to secure.

#### III. <u>REMOVING THE TOOL</u>

- 1. Grab the end of the strap at the red tab and pull away from the Base to release the hook & loop connection.
- 2. Pull the tool towards you, through the loosened strap. Strap will free itself as you pull.

