DEPLOYMENT INSTRUCTIONS

STEP 1: Grasp the orientation indicator strap with your right hand.

STEP 2: With your left hand, pull the zipper towards your body and around the carrier until the front and back are completely separated.

STEP 3: Raise carrier over head and place on your shoulders (See Fitting Instructions). *Note: side with orientation indicator strap is front side of the armor.*

STEP 4: Secure waist buckles. Pull tight for comfort and fit.



The DKX Max III series of rifle plates, manufactured by DKX Advanced Materials, are NIJ Standard-0101.06 certified level III plates capable of stopping all non-armor piercing (AP) rounds as well as many other advanced threat rounds such as the 7.62x39 MSC.

- Ultra-light, 2.9 lbs
- Multi-hit rated
- Made in USA
- NIJ certified level III protection stand-alone
- RFEV (Radio Frequency Embedded Verification)



For more hard armor solutions, please visit DKXarmor.com

For More Information please visit www.NARescue.com







USER INSTRUCTIONS & BASIC CARE MANUAL




Patented. U.S. Patent 7441278

USER INSTRUCTIONS

The AGENT Carrier System is an innovative, lightweight, compact, hard armor system designed to be totally discrete. On the outside, the AGENT appears to be an ordinary, soft-sided briefcase, but with one swift pull of the YKK zipper, it quickly transforms into a MOLLE-equipped, mission-configurable hard armor carrier.

Phalanx Defense Systems recommends that you take time to familiarize yourself with and configure your Agent Carrier System prior to putting into service.

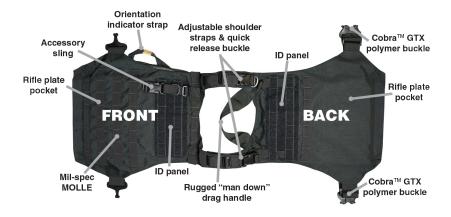

FITTING INSTRUCTIONS

STEP 1: Place the AGENT on a flat surface, and unzip the case so that the inside is facing upward.

STEP 2: Locate the orientation indicator, which is the handle with the contrasting, colored fabric swatch wrapped around it. This should be used to identify the front side of the carrier.







STEP 3: Pick up the AGENT by the two shoulder straps with the orientation indicator facing to the front. Place the carrier over your head and position the shoulder straps over each shoulder. Adjust the shoulders evenly so that the top of the front-side of the carrier is roughly 2" below the base of the throat. Use the left and right shoulder straps to adjust the carrier to the correct height and position.

STEP 4: Next, connect the waist buckles. Using the adjustment straps, tighten the bottom of carrier firmly against the body. The adjustment straps have hook and loop straps that wrap around to hold the slack in place.

NOTE: If the carrier is not already equipped with hard armor plates, leave a little extra space in the adjustment straps to accommodate the plates once they've been inserted. You may need to readjust the straps after the hard armor plates have been incorporated to ensure proper fit.

PLATE INTEGRATION INSTRUCTIONS

STEP 1: Place the AGENT on a flat surface, and fully unzip the case so that the MOLLE side is facing upward.

STEP 2: Using the orientation indicator, identify the front side of the carrier. Next, locate the plate pocket enclosure at the bottom of the carrier. Pull apart the hook and loop to access the plate pocket enclosure.









STEP 3: Reach inside of the carrier and detach the hook section of the plate strap from the loop section.

STEP 4: With the strikeface of the hard armor plate facing upward, slide the plate (shooter's cut end first, if applicable) all the way into the carrier. Next, ensure the plate is positioned correctly, and centered. Secure the vertical straps and then the horizontal straps.

STEP 5: Close the hook and loop enclosure at the bottom of the carrier.

STEP 6: Repeat steps 3 through 5 to insert the plate into the back side of the carrier.